


1- Insert cartridges inside your printer.



2- Insert the plastic bar as shown in the pictuers 2&3.

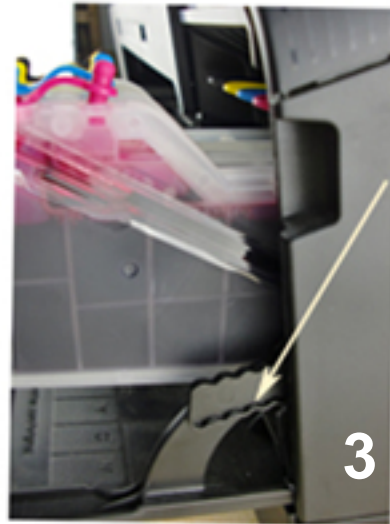

3- Remove the small plugs and put the air filters on top of the small hole.

Please note that the big hole is just for refilling