

# RESET THE CHIP-SET



- 1- Power the printer on
- 2- Keep holding the power button
- 3- Open the printer lid
- 4- Remove the door sensor plug
- 5- Keep the lid open for 30 seconds
- 6- Put the door sensor plug back
- 7- Close the printer lid
- 8- Release the power button

